

SERVICE SCHEDULE

Maintenance Intervals

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures.

The service schedule is a guide for correct maintenance of the Bobcat excavator.



WARNING

AVOID INJURY OR DEATH

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0807

Every 10 Hours (Before Starting The Excavator)

- **Engine Oil** - Check level and add as needed.
- **Engine Air Filters and Air System** - Check condition indicator and empty dust cup as needed. Check air system for leaks.
- **Engine Cooling System** - Check coolant level COLD and add premixed coolant as needed.
- **Seat Belt, Seat Belt Retractors, Seat Belt Mounting hardware, Control Console Lockout** - Check the condition of seat belt and mounting hardware. Clean or replace seat belt retractors as needed. Check the control console lockout lever for proper operation. Clean dirt and debris from moving parts.
- **Motion Alarm** - Check for proper function.
- **TOPS** - Check condition. Check mounting hardware.
- **Indicators and Lights** - Check for correct operation of all indicators and lights.
- **Safety Signs and Safety Tread** - Check for damaged signs (decals) and safety treads. Replace any signs or safety treads that are damaged.
- **Hydraulic Fluid, Hoses and Tubelines** - Check fluid level and add as needed. Check for damage and leaks. Repair or replace as needed.
- **Track Tension** - Check tension and adjust as needed.
- **Pivot Points** - Grease all machinery pivot points.

Every 50 Hours

- **Swing Bearing** - Grease swing bearing and swing pinion. Service every 10 hours when operating in water.
- **Battery** - Check cables, connections, and electrolyte level; add distilled water as needed.
- **Fuel Tank** - Drain water and sediment from fuel tank and fuel filter.

Every 100 Hours

- **Spark Arrestor Muffler** - Clean spark chamber.
- **Drive Belts (Alternator / Fan)** - Check condition. Replace as needed. Service at first 50 hours, then as scheduled.
- **Alternator and Starter** - Service at first 50 hours, then as scheduled. Check connections.

Every 250 Hours Or Every 12 Months

- **Fuel Filter** - Replace filter.
- **Travel Motors (Final Drive)** - Check fluid level and add as needed.

SS EXC 418-0315

SERVICE SCHEDULE (CONT'D)

Maintenance Intervals (Cont'd)

Every 500 Hours Or Every 12 Months

- **Engine Oil and Filter** - Service at first 50 hours, then as scheduled. Replace oil and filter.
- **Cooling System** - Clean debris from radiator and hydraulic fluid cooler (if equipped).
- **Hydraulic Filter and Hydraulic Reservoir Breather Cap** - Replace the hydraulic filter and the reservoir breather cap.
- **Alternator and Starter** - Service at first 50 hours, then as scheduled. Check connections.
- **Engine Valves** - Adjust the engine valve clearance.

Every 1000 Hours Or Every 12 Months

- **Coolant** - Replace the coolant.
- **Hydraulic Fluid and Filters** - Replace hydraulic fluid and filters. Clean reservoir.
- **Travel Motors (Final Drive)** - Service at first 100 hours, then as scheduled. Replace fluid.

SS EXC 418-0315