
SERVICE SCHEDULE
Every 10 Hours (Before Starting The Machine)

Engine Oil	Check level and add as needed.
Engine Air Filters and Air System	Check the display. Service only when required. Check for leaks and damaged components.
Fuel Filter	Check the display. Service only when required.
Engine Cooling System	Check coolant level cold and add premixed coolant as needed.
Hydraulic Fluid	Check fluid level and add as needed.
Seat Belt, Seat Belt Retractors, Seat Belt Mounting Hardware, Control Console Lockout	Check the condition of seat belt and mounting hardware. Clean or replace seat belt retractors as needed. Check the control console lockout lever for proper operation. Clean dirt and debris from moving parts.
Motion Alarm and Horn	Check for proper function.
Operator Canopy / Cab	Check the canopy / cab condition and mounting hardware.
Operator Cab and HVAC Filters	Clean filters.
Indicators and Lights	Check for correct operation of all indicators and lights.
Safety Signs	Check for damaged signs (decals). Replace any signs that are damaged.
Track Tension	Check tension and adjust as needed.
Pivot Points	Grease all machinery pivot points. Grease clamp (if equipped).
X-Change / Attachment Coupler	Check for damage or loose parts (if equipped).

First 50 Hours

Hydraulic Filter and Case Drain Filter	Replace the hydraulic filter and case drain filter.
Alternator and Starter	Check connections.
Travel Motors (Final Drive)	Replace fluid.

Every 50 Hours

Swing Bearing	Grease swing bearing and swing pinion. Service every 10 hours when operating in water.
---------------	--

Every 250 Hours Or Every 12 Months

Battery	Check cables and connections.
Travel Motors (Final Drive)	Check fluid level and add as needed.

Every 500 Hours Or Every 12 Months

Engine Air Filters and Air System	Check the display. Service only when required. Check for leaks and damaged components.
Engine Cooling System	Clean debris from radiator, fuel cooler, hydraulic fluid cooler, and air conditioning condenser (if equipped).
Drive Belts (Alternator) (Air Conditioning - If Equipped)	Check condition. Replace as needed.
Hydraulic Filter, Case Drain Filter, and Hydraulic Reservoir Breather Cap	Replace the hydraulic filter, case drain filter, and reservoir breather cap.
Alternator and Starter	Check connections.
HVAC	Clean housing and coils.

Every 750 Hours Or Every 12 Months

Engine Oil and Filter	Replace oil and filter.
-----------------------	-------------------------

Every 1000 Hours Or Every 12 Months

Fuel Pre-Filter	Replace the pre-filter.
Fuel Tank Vent Filter	Replace the vent filter.
Travel Motors (Final Drive)	Replace fluid.
Hydraulic Fluid and Filters	Replace hydraulic fluid and filters.

Every 24 Months

Coolant	Replace the coolant.
---------	----------------------